

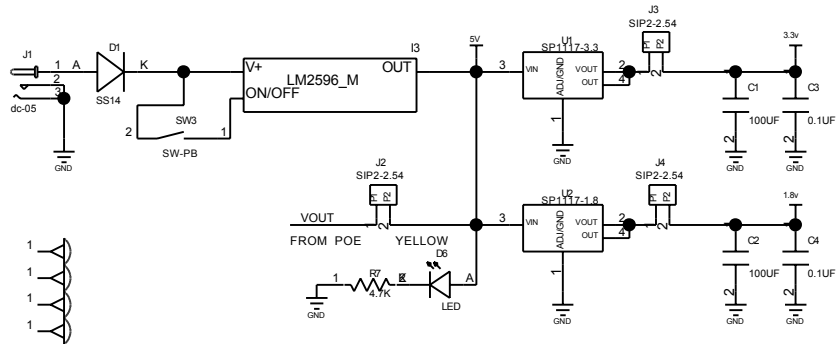
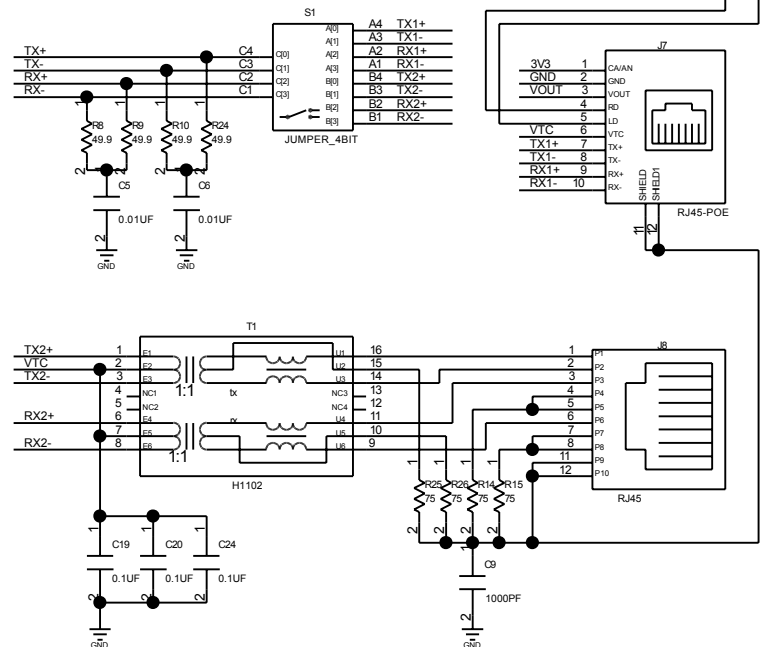
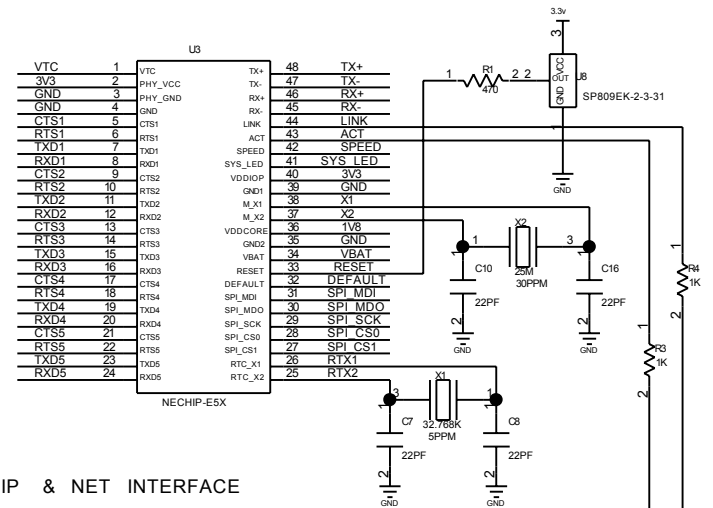







EXTENSION CONNECTOR

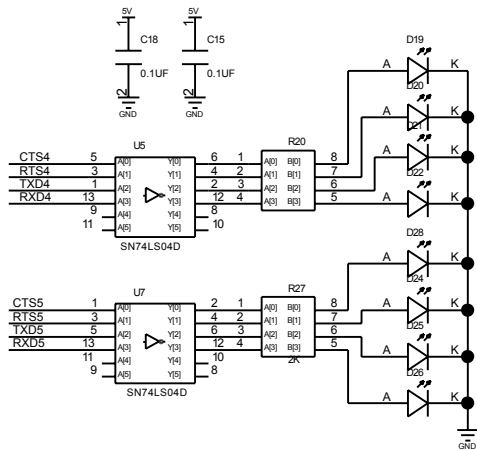


TITLE:	NECHIP EVAL	DATE:
ENGINEER:		PAGE:

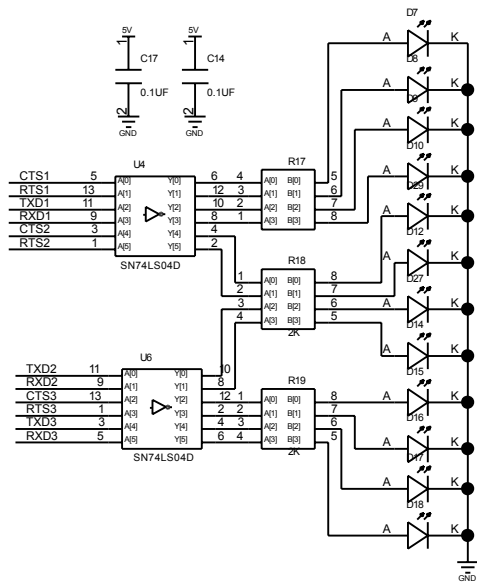


SIGNAL INDICATION OF UART

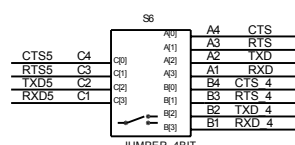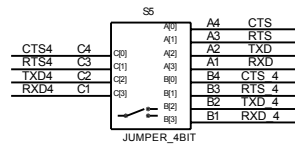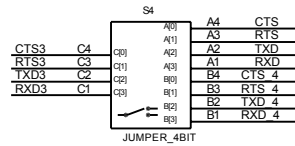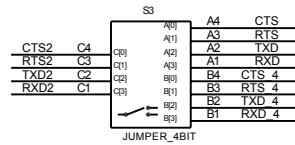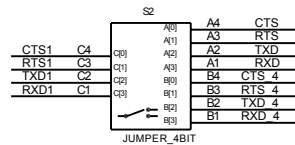

CHANNEL SELECT JUMPER FROM UARTS

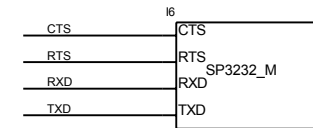


RS232 INTERFACE BLOCK

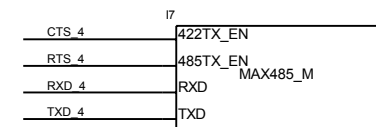

RS485/422 INTERFACE BLOCK

TITLE:	NECHIP EVAL	DATE:
ENGINEER:		PAGE:

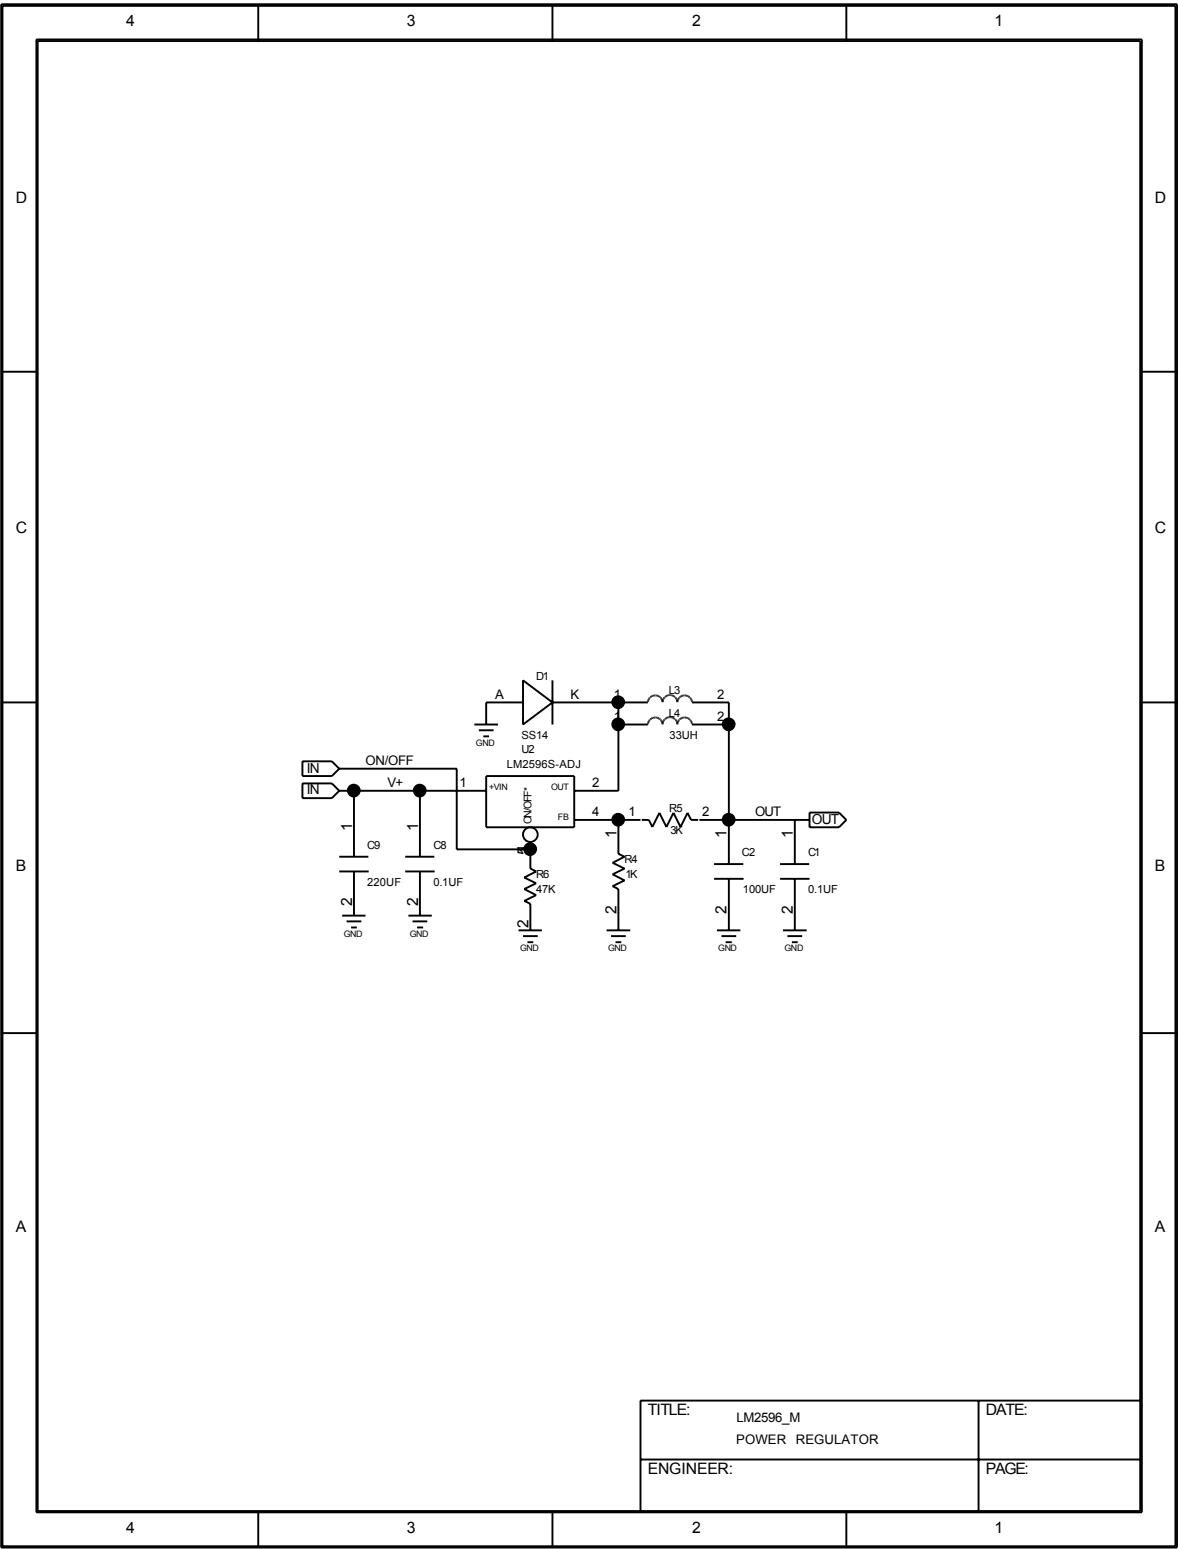

PAGE:

